



SquareLED - Aura Bar & Matrix Beam Light 100

Manual | Aura Bar & Matrix Beam Light 100

1. SAFETY INSTRUCTIONS




Please read these instructions carefully they include the important information about the installation usage and maintenance of this products

- Please keep this User Manual for future consultation. If you sell the fixture to another user, be sure that they also receive this instruction booklet.
- Unpack and check carefully there is no transportation damage before using the fixture.
- It's important to ground the yellow/green conductor to earth in order to avoid electric shock.
- Disconnect main power before servicing and maintenance.
- The unit must be installed in a location with adequate ventilation, at least 50cm from adjacent surfaces. Be sure that no ventilation slots are blocked.
- Maximum ambient temperature is $T_a : 40^{\circ}\text{C}$. Don't operate it where the temperature is higher than this.
- Unit surface temperature may reach up to 85°C . Don't touch the housing bare-hand during its operation. Turn off the power and allow about 15 minutes for the unit to cool down before replacing or serving.
- In the event of serious operating problem, stop using the fixture immediately. Never try to repair the fixture by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. Always use the same type spare parts.
- Do not connect the device to any dimmer pack.
- Do not touch any wire during operation and there might be a hazard of electric shock.
- To prevent or reduce the risk of electrical shock or fire, do not expose the fixture to rain or moisture.
- The housing must be replaced if they are visibly damaged.
- Do not look directly at the LED light beam while the fixture is on.
- There are no user serviceable parts inside the fixture. Do not open the housing or attempt any repairs by yourself. In the unlikely event your fixture may require service, please contact your nearest dealer.
- Due to the magnifying type lens, please keep the lens out of contact with direct sunlight. Direct sunlight can cause heat to build up inside of the unit, which will seriously damage unit.

Manual | Aura Bar & Matrix Beam Light 100

2. Technical Specifications

- DMX 1/2/4/12/14/16 channels switchable.
- Smooth 0~100% dimming and variable strobe speeds.
- Three operation modes: DMX, Master/Slave mode, Sound Active.
- Ideal for discotheques, clubs, bars, parties, Mobile DJs, ect.
- Power Supply: 120~230V 50/60Hz
- Power consumption: 70W
- LED: 12PCS 3WCREE (2800K WW)/ 48PCS 5050SMD RGB
- Dimension: 1000* 83* 109mm
- Weight: 3.9 kgs

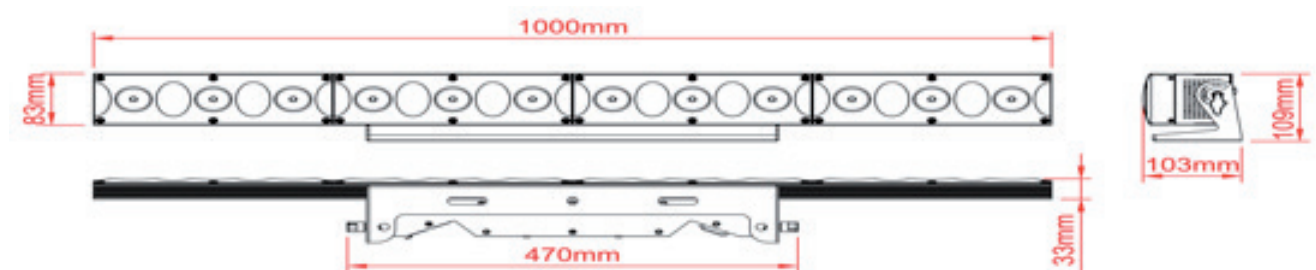

3. Installation

The unit should be mounted via its screw holes on the bracket. Always ensure that the unit is firmly fixed to avoid vibration and slipping while operating.

Always ensure that the structure to which you are attaching the unit is secure and is able to support a weight of 10 times of the unit's weight. Also always use a safety cable that can hold 12 times of the weight of the unit when installing the fixture.

The equipment must be fixed by professionals. And it must be fixed at a place where is out of the touch of people and has no one pass by or under it, the range of mounting height is 0~30 M.


Manual | Aura Bar & Matrix Beam Light 100

4. How to set the unit

4.1 Rear Panel

- **1 - Display:** To show the various menus and the selected functions
- **3 - Button:**

MENU	To select the programming functions with short press.
DOWN	To go backward in the selected functions
UP	To go forward in the selected functions
ENTER	To confirm the selected functions

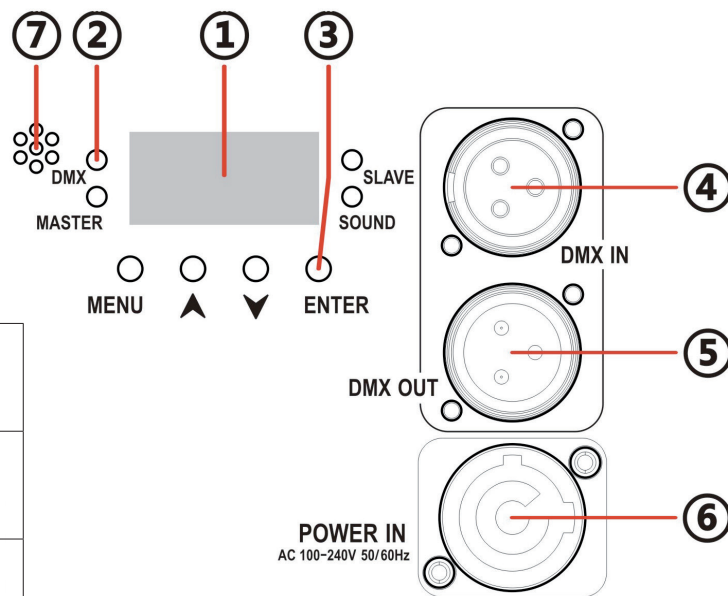

- **4 - DMX input:** For DMX512 link, use 3/5-pin XLR plug cable to input DMX signal.
- **5 - DMX output:** For DMX512 link, use 3/5-pin XLR plug cable to link the next unit.
- **6 - POWER input:** Connect to supply mains power.
- **7 - Microphone:** Receive music for the sound active.

4.2 Main Function

To select any functions, press MENU button until the required one is shown on the display. Select the function by ENTER button and the display will blink. Use DOWN and UP button to change the mode. Once the required mode has been selected, press ENTER button to setup or it will automatically return to the main functions without any change after idling 30 seconds. Back to the functions without any change press MENU button. The main functions are shown below:

DMX Address	1-512
Channel Mode	4CH 5 CH 7CH 24 CH 26CH 28 CH

Manual | Aura Bar & Matrix Beam Light 100

Slave Mode	Master Slave 1- Slave 15
Show Mode	Show0~Show12 Manual
Show Mode-C	Show0~Show4
Manual Mode	Dimmer 0 - 255 Strobe 0 - 255
Sound State	Sound mode On - Off
Sound Sense	Sound sense 0-100%
Blackout	Yes No
Blackout-C	On - Off
Back Light	On - Off
Auto Test	
Fixture Time	Fixture hours 0 ~ 9999
Version	V 10

DMX Address

Press the **MENU** button up to when the **DMX Address** is shown on the display. Pressing the **ENTER** button and the display will blink. Use the **DOWN** and **UP** button to change the DMX 512 address.

Once the address has been selected, press the **ENTER** button to setup or automatically exit menu mode without any change after 7 seconds. Back to the previous functions without any change press the **MENU** button.

Channel Mode

Press the **MENU** button up to when the **Channel Mode** is shown on the display. Pressing the **ENTER** button, Use the **DOWN** and **UP** button to select the (1 channel) or (2 channels) or (4 channels) or (12 channels) or (14 channels) or (16 Channels) mode. Once selected, press the **ENTER** button to setup or automatically exit menu mode without any change after 7 seconds. To go back to the functions without any change press the **MENU** button.

Manual | Aura Bar & Matrix Beam Light 100

Slave Mode

Press the **MENU** button up to when the **Slave Mode** is shown on the display. Pressing the **ENTER** button. Use the **DOWN** and **UP** button to select the (slave 1) or (Slave 2) . . . or (Slave 15)mode.

Once selected, press the **ENTER** button to setup or automatically exit menu mode without any change after 7 seconds. To go back to the functions without any change press the **MENU** button.

Show Mode

Press the **MENU** button up to when the **Show Mode** is shown on the display. Pressing the **ENTER** button. Use the **DOWN** and **UP** button to select the Show0 (Random show) or Show1 (show 1) or Show2 (Show 2) or . . . or Manual (Manual).

Once selected, press the **ENTER** button to store or automatically exit menu mode without any change after 7 seconds. To go back to the functions without any change press the **MENU** button.

Manual Mode

Press the **MENU** button up to when the **Manual Mode** is shown on the display. Pressing the **ENTER** button. Use the **DOWN** and **UP** button to select the strobe (strobe) or dimmer (dimmer). Once selected strobe, Pressing the **ENTER** button, Use the **DOWN** and **UP** button to change the strobe 0 – 255.

Once selected, press the **ENTER** button to store. If you select dimmer, Pressing the **ENTER** button. Use the **DOWN** and **UP** button to change the dimmer 0 – 255, Once selected, press the **ENTER** button to setup or automatically exit menu mode without any change after 60 seconds. To go back to the functions without any change press the **MENU** button.

Sound State

Select **Sound State**, press the **ENTER** button to confirm, present mode will blink on the display. Use the **DOWN** and **UP** button to select the **On (sound on)** or **Off (sound off)** mode.

Once the mode has been selected, press the **ENTER** button to setup, to go back to the functions without any change press the **MENU** button again. Hold and press the **MENU** button about one second or wait for one minute to exit the menu mode.

Sound Sense

Press the **MENU** button up to when the Sound Sense is shown on the display. Press the **ENTER** button and the display will blink. Use the **DOWN** and **UP** buttons to adjust the sound sensitively (0-100) of the unit.

Once selected, press the **ENTER** button to setup or automatically exit menu mode without any change after 7 seconds. To go back to the functions without any change press the **MENU** button.

Manual | Aura Bar & Matrix Beam Light 100

Blackout Mode

Press the **MENU** button up to when the **Blackout Mode** is shown on the display. Pressing the **ENTER** button, Use the **DOWN** and **UP** button to select the yes (blackout) or no (normal).

Once selected, press the **ENTER** button to setup or automatically exit menu mode without any change after 7 seconds. To go back to the functions without any change press the **MENU** button.

Back Light

Select **Back Light**, press the **ENTER** button to confirm, present mode will blink on the display. Use the **DOWN** and **UP** button to select the **On (Led on)** or **Off (Led off)** mode.

Once the mode has been selected, press the **ENTER** button to setup, to go back to the functions without any change press the **MENU** button again. Hold and press the **MENU** button about one second or wait for one minute.

Auto-Test

Press the **MENU** button up to when the **Auto-Test** is blinking on the display. Pressing **ENTER** button and the unit will run self-test by built-in program. To go back to the functions press the **MENU** button again. Hold and press the **MENU** button about one second or wait for one minute to exit the menu mode.

Fixture Time

Press the **MENU** button up to when the **Fixture Time** is blinking on the display. Pressing **ENTER** button and the display will show the number of working hours of the unit.

To go back to the functions press the **MENU** button again. Hold and press the **MENU** button about one second or wait for one minute to exit the menu mode.

Firmware Version

Press the **MENU** button up to when the **Firmware version** is blinking on the display. Pressing **ENTER** button and the display will show the version of software of the unit.

To go back to the functions press the **MENU** button again. Hold and press the **MENU** button about one second or wait for one minute to exit the menu mode.

Manual | Aura Bar & Matrix Beam Light 100

5. How To Control The Unit

You can operate the unit in three ways:

1. By master/slave built-in preprogram function
2. By easy controller
3. By DMX controller

No need to turn the unit off when you change the DMX address, as new DMX address setting will be affected at once. Each time you turn the unit on, it will show "M312" on the display. After that the unit will be ready to receive DMX signal or run the built in programs.

5.1 Master/Slave Built In Preprogrammed Function

By linking the units in master/slave connection, the first unit will control the other units to give an automatic, sound activated, synchronized light show. This function is good when you want an instant show.

You have to set the first unit in master mode and select Show0 (random show), Show1 (show 1) or . . . or Show8 (show 8). Its DMX input jack will have nothing plugged into it, and its master LED will be constantly on and sound LED will flash to the music.

5.2 DMX Controller

Using universal **DMX controller** to control the units, you have to set DMX address from 1 to 512 channel so that the units can receive DMX signal.

Press the **MENU** button up to when the DMX Address is showing on the display. Pressing **ENTER** button and the display will blink. Use **DOWN** and **UP** button to change the DMX512 address. Once the address has been selected, press and keep **ENTER** button pressed up to when the display stops blinking or storing automatically 8 seconds later. To go back to the functions without any change press the **MENU** button again. If you use please refer to the following diagram to address your DMX512 channel for the first 4 /2 units.

Channel Mode	Unit 1	Unit 2	Unit 3	Unit 4
4 Channel	1	5	9	13
5 Channel	1	9	17	25
7 Channel	1	8	15	23
24 Channel	1	25	49	73
26 Channel	1	27	53	79
28 Channel	1	29	57	85

Manual | Aura Bar & Matrix Beam Light 100

4-CH Mode

CH1	warm white	000-107	Strobe
		108-255	Strobe
CH2	Red	000-255	0% - 100%
CH3	Green	000-255	0% - 100%
Ch4	Blue	000-255	0% - 100%

5-CH Mode

CH1	Dimmer	000-255	0% - 100%
CH2	Strobe	000-255	0% - 100%
CH3	Red	000-255	0% - 100%
Ch4	Green	000-255	0% - 100%
CH5	Blue	000-255	0% - 100%

7-CH Mode

CH1	Dimmer	000-255	0% - 100%
CH2	Strobe	000-255	0% - 100%
CH3	Warm white	000-007	LED Blackout
		008-247	LED Chase1 - LED Chase12
		248-255	Sound random mode
Ch4	LED Chase speed	000-255	0% - 100%
CH5	Red	000-255	0% - 100%
CH6	Green	000-255	0% - 100%
CH7	Blue	000-255	0% - 100%

Manual | Aura Bar & Matrix Beam Light 100

24-CH Mode

CH1 - CH12	Warm white	000-255	0% - 100%
CH13	Red	000-255	0% - 100%
CH14	Green	000-255	0% - 100%
CH15	Blue	000-255	0% - 100%
CH16	Red	000-255	0% - 100%
CH17	Green	000-255	0% - 100%
CH18	Blue	000-255	0% - 100%
CH19	Red	000-255	0% - 100%
CH20	Green	000-255	0% - 100%
CH21	Blue	000-255	0% - 100%
CH22	Red	000-255	0% - 100%
CH23	Green	000-255	0% - 100%
CH24	Blue	000-255	0% - 100%

26-CH Mode

CH1 - CH12	Warm white	000-255	0% - 100%
CH13	Dimmer	000-255	0% - 100%
CH14	Strobe	000-255	0% - 100%
CH15	Red	000-255	0% - 100%
CH16	Green	000-255	0% - 100%
CH17	Blue	000-255	0% - 100%
CH18	Red	000-255	0% - 100%
CH19	Green	000-255	0% - 100%
CH20	Blue	000-255	0% - 100%
CH21	Red	000-255	0% - 100%

Manual | Aura Bar & Matrix Beam Light 100

CH22	Green	000-255	0% - 100%
CH23	Blue	000-255	0% - 100%
CH24	Red	000-255	0% - 100%
CH25	Green	000-255	0% - 100%
CH26	Blue	000-255	0% - 100%

28-CH Mode

CH1 - CH12	Warm white	000-255	0% - 100%
CH13	Dimmer	000-255	0% - 100%
CH14	Strobe	000-255	0% - 100%
CH15	Warm white	000-007	LED Blackout
		008-247	LED Chase 1 - LED Chase 12
		248-255	Sound random mode
CH16	LED Chase Speed	000-255	0% - 100%
CH17	Red	000-255	0% - 100%
CH18	Green	000-255	0% - 100%
CH19	Blue	000-255	0% - 100%
CH20	Red	000-255	0% - 100%
CH21	Green	000-255	0% - 100%
CH22	Blue	000-255	0% - 100%
CH23	Red	000-255	0% - 100%
CH24	Green	000-255	0% - 100%
CH25	Blue	000-255	0% - 100%
CH26	Red	000-255	0% - 100%
CH27	Green	000-255	0% - 100%
Ch28	Blue	000-255	0% - 100%

Manual | Aura Bar & Matrix Beam Light 100

7. DMX512 Connections

mode connection



Termination reduces signal errors and to avoid signal transmission problems and interference. It is always advisable to connect a DXM terminal. (Resistance 120 ohm 1/4W) between pin2(DXM-) and pin3(DXM+) of the last fixture.



- Connect the fixture together in a “daisy chain” by XLR plug cable from the output of the fixture to the input of the next fixture. The cable cannot be branched or split to a “Y” cable. Inadequate or damaged cables, soldered joints or corroded connectors can easily distort the signal and shut down the system.
- The DMX output and input connectors are pass-through to maintain the DMX circuit when one of the units’ power is disconnected.
- At last fixture, the DMX cable has to be terminated with a terminator to reduce signal errors. Solder a 120-ohm 1/4W resistor between pin 2(DMX-) and pin 3(DMX+) into a 3-pin XLR-plug and plug it in the DMX-output of the last fixture.
- Each lighting fixture needs to have an address set to receive the data sent by the controller. The address number is between 0-511 (usually 0 & 1 are equal to 1).
- 3 pin XLR connectors are more popular than 5 pins XLR.
- 3 pin XLR: Pin 1: GND, Pin 2: Negative signal (-), Pin 3: Positive signal (+)
- 5 pin XLR: Pin 1: GND, Pin 2: Negative signal (-), Pin 3: Positive signal (+), Pin4/5: not used

8. Troubleshooting

Following are a few common problems that may occur during operation. Here are some suggestions for easy troubleshooting:

A. The fixture does not work, no light

- Check the connection of power and main fuse.
- Measure the mains voltage on the main connector.

Manual | Aura Bar & Matrix Beam Light 100

B. Not responding to DMX controller

- DMX LED should be on. If not, check DMX connectors, cables to see if link properly.
- If the DMX LED is on and no response to the channel, check the address settings and DMX polarity.
- If you have intermittent DMX signal problems, check the pins on connectors or on PCB of the fixture or the previous one.
- Try to use another DMX controller.
- Check if the DMX cables run near or run alongside to high voltage cables that may cause damage or interference to DMX interface circuit.

C. Some fixtures don't respond to the easy controller

- You may have a break in the DMX cabling.
- Check the LED for the response of the master/ slave mode signal.

D. No response to the sound

- Make sure the fixture does not receive DMX signal.
- Check microphone to see if it is good by tapping the microphone.

E. One of the channels is not working well

- The stepper motor might be damaged or the cable connected to the PCB is broken.
- The motor's drive IC on the PCB might be out of condition.

9. Fixture Cleaning

The cleaning of internal must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: damp, smoky or particularly dirty surrounding can cause greater accumulation of dirt on the fixture's optics.

- Clean with soft cloth using normal glass cleaning fluid.
- Always dry the parts carefully.
- Clean the external optics at least every 20 days. Clean the internal optics at least every 30/60 days



Das Lichttechnikhaus Vertriebs GmbH

Rudolf-Diesel-Str. 3, D-89312 Günzburg

Telefon +49 (0) 82 21 207 98-0

Fax +49 (0) 82 21 207 98-69

E-Mail info@lth-gmbh.de

Web www.lth-gmbh.de