



## DMX CHART – LUXIBEL B EXPO500TW

3/4/7 channels

### 3 Channel Mode

Channel	Name	Value	Function
CH 1		0-255	Dimmer Coarse
CH 2		0-255	CCT: 2800K – 6000K
CH 3		0-255	Zoom

### 4 Channel Mode

Channel	Name	Value	Function
CH 1		0-255	Dimmer Coarse
CH 2		0-255	Dimmer Fine
CH 3		0-255	CCT: 2800K – 6000K
CH 4		0-255	Zoom

7 Channel Mode

Channel	Name	Value	Function
CH 1		0-255	Dimmer Coarse
CH 2		0-255	Dimmer Fine
CH 3		0-255	CCT: 2800K – 6000K
CH 4	Zoom	0-255	Small angle -> Big angle
CH 5	Strobe	0-5	Strobe Open
		6-127	Strobe effect slow to fast
		128-255	Random strobe effect slow to fast
CH 6	Fans Mode	0-9	No function
		10-70	Auto
		71-119	No function
		120-160	Silent
		161-179	No function
		180-220	High
		221-255	No function
CH 7	Frequency	0-0	No function
		1-30	600 Hz
		31-39	No function
		40-60	1200 Hz
		61-79	No function
		80-100	2000 Hz
		101-119	No function
		120-140	2400 Hz
		141-149	No function
		150-170	4000 Hz
		171-189	No function
		190-210	16Khz
		211-219	No function
		220-240	18Khz
		241-255	No function