


**Lupo**  
Made in Italy

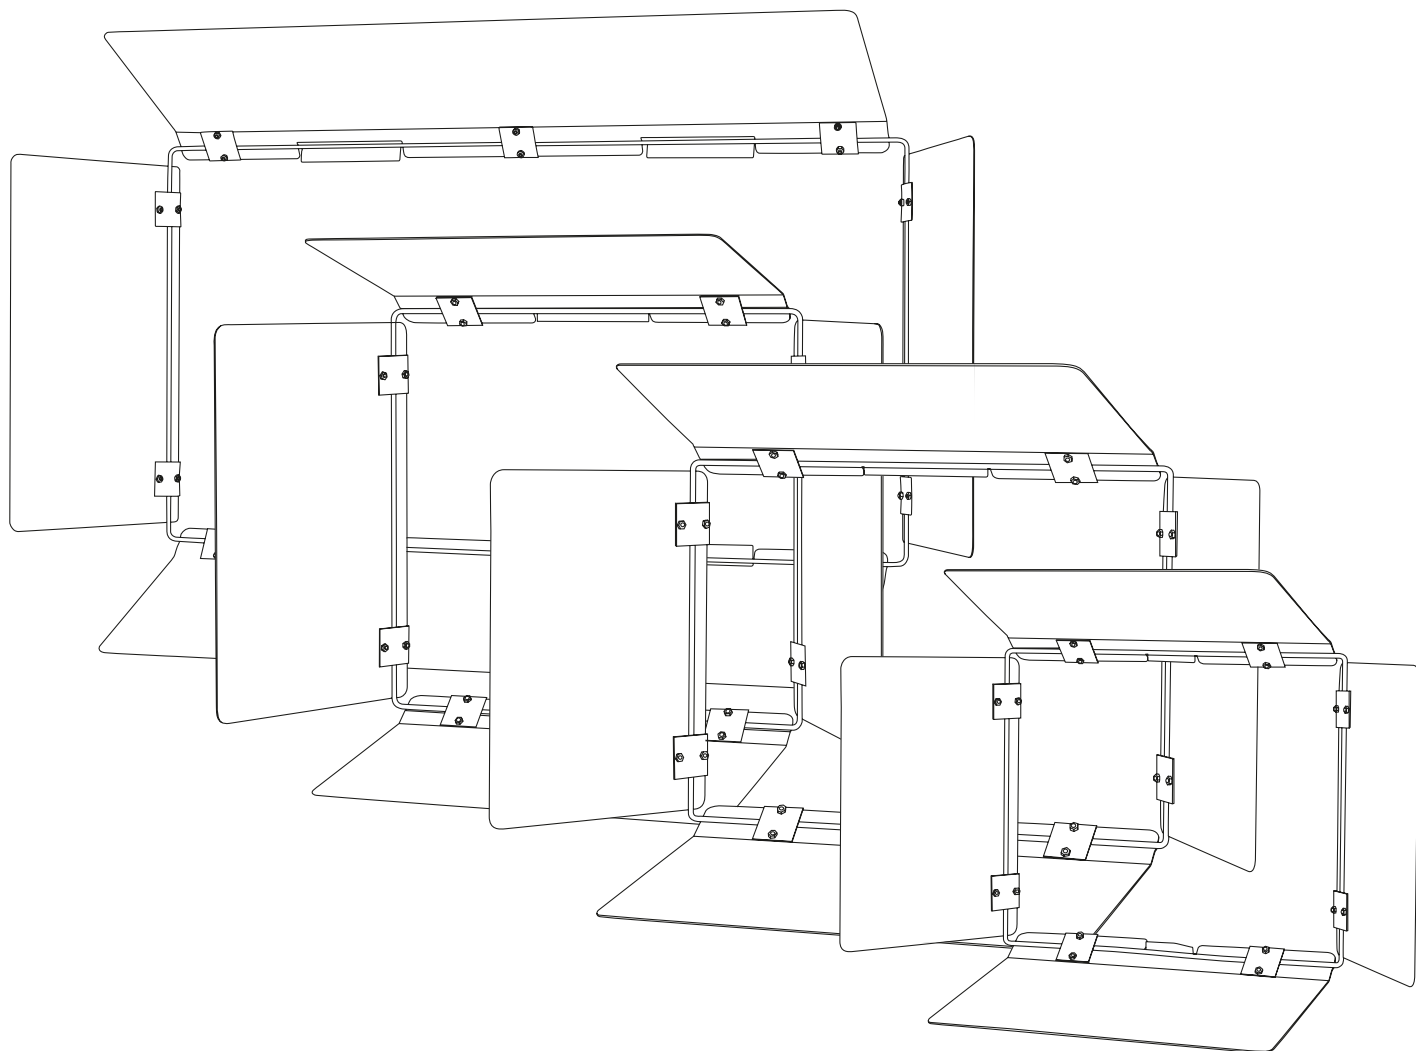

---

**User Manual**

---

**Superpanel/Lupoled/  
Actionpanel  
BARNDOORS**

## Instructions

Mount the barndoors on the Superpanel/Lupoled via the two captive screws on the barndoors brackets. The two captive screws must be screwed to the threads on the upper and lower sides of the Superpanel/Lupoled. The bracket with the hole must be positioned on the top of the fixture. Once the captive screws are tightened, the barndoors are ready to be used. It is suggested to insert a diffuser filter inside the integrated filter holder of the Superpanel/Lupoled in order of obtain a more uniform light output.

