




# ASSEMBLY INSTRUCTION

## NP2C & NP3C | 1/4" Professional Phone Plug

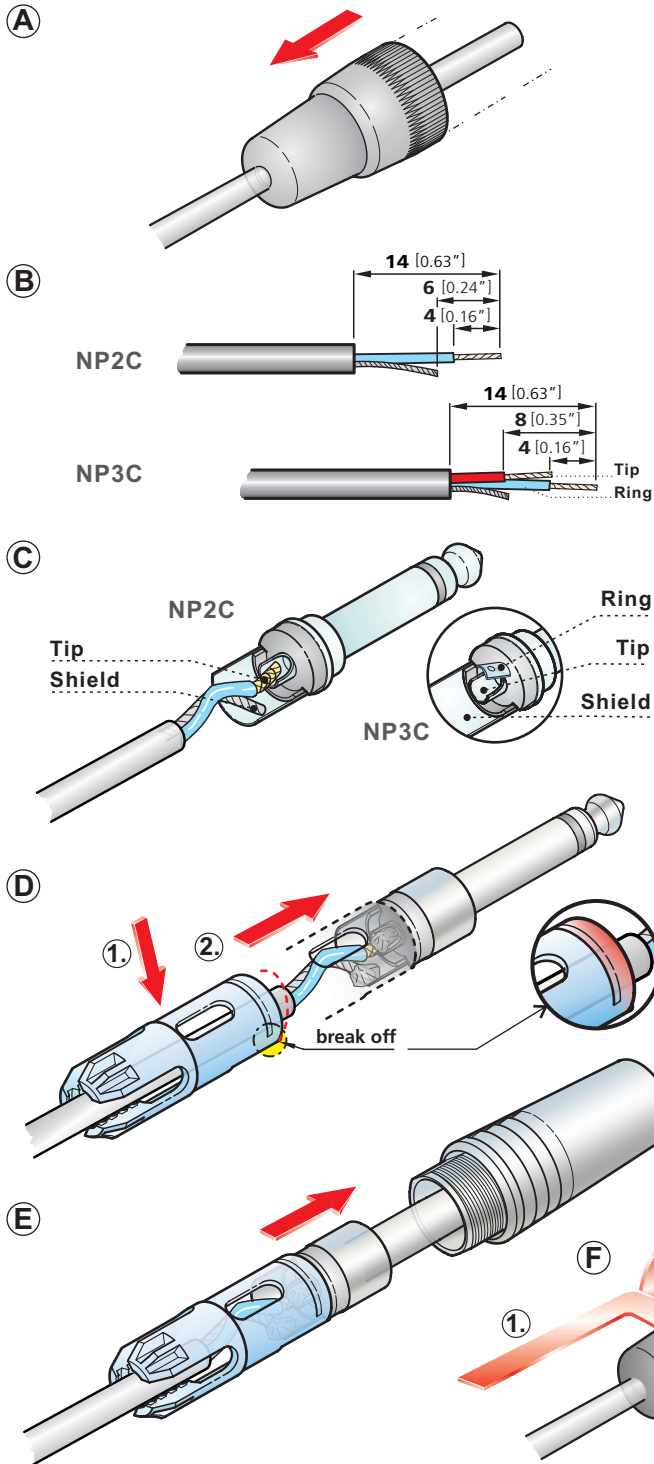

**(A)** Slide the boot onto the cable.

**(B)** Prepare the cable as shown.

Cable O.D.: 4.0 - 7.0 mm [0.157 - 0.276"]  
Wire size: 1 mm<sup>2</sup> (AWG 18)

**(C)** Solder the wire ends.

**(D)** Position the chuck onto the cable and align chuck with plugfinger.

**Attention:**  
If using a cable with O.D. > 5.50 mm [0.216"]  
break away this part of the chuck.

**(E)** Slide the housing onto the plugfinger with the chuck.

**(F)** Finish the installation by tightening the bushing onto the connector.

Find more details of Professional Phone Plug on [www.neutrik.com](http://www.neutrik.com).



NEUTRIK AG LI T: +423/237 24 24 F: +423/232 53 93  
NEUTRIK USA Inc. USA T: +1 704 / 972 3050 F: +1 704/438 9202  
NEUTRIK (UK) Ltd. UK T: +44 1983 / 811 441 F: +44 1983/811 439  
NEUTRIK Vertriebs GmbH DE/NL/AT/DK T: +49 8131 / 280 890 F: +49 8131/280 830

NEUTRIK France FR T: +33 1/4131 6750 F: +33 1/4131 0511  
NEUTRIK Tokyo Ltd. JP T: +81 3/3663 4733 F: +81 3/3663 4796  
NEUTRIK Hong Kong Ltd. HK T: +852/2687 6055 F: +852/2687 6052  
NEUTRIK India Pvt. Ltd. IND T: +91/982 05 43 424 F: +91/22 26163 540

Draft. Nr.: BDA 460-0 / 3102M1111 | Update: 28.07.2015 | Data subject to change without prior notice. ©2015 NEUTRIK®. ALL RIGHTS RESERVED. NEUTRIK® are registered trademark.

[www.neutrik.com](http://www.neutrik.com)

**NEUTRIK**